

CONNECTOR QUICK REFERENCE GUIDE


Publication Part No. JLR 17 92 21_1E

Document Objective: To provide basic connector location information only, including in-lines and grounds.

Note: A RHD version of this document will not be produced. For detailed connector information (including RHD), refer to the Electrical Reference Library (ERL).

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, steering, climate control and some link leads.

All paper copies are uncontrolled

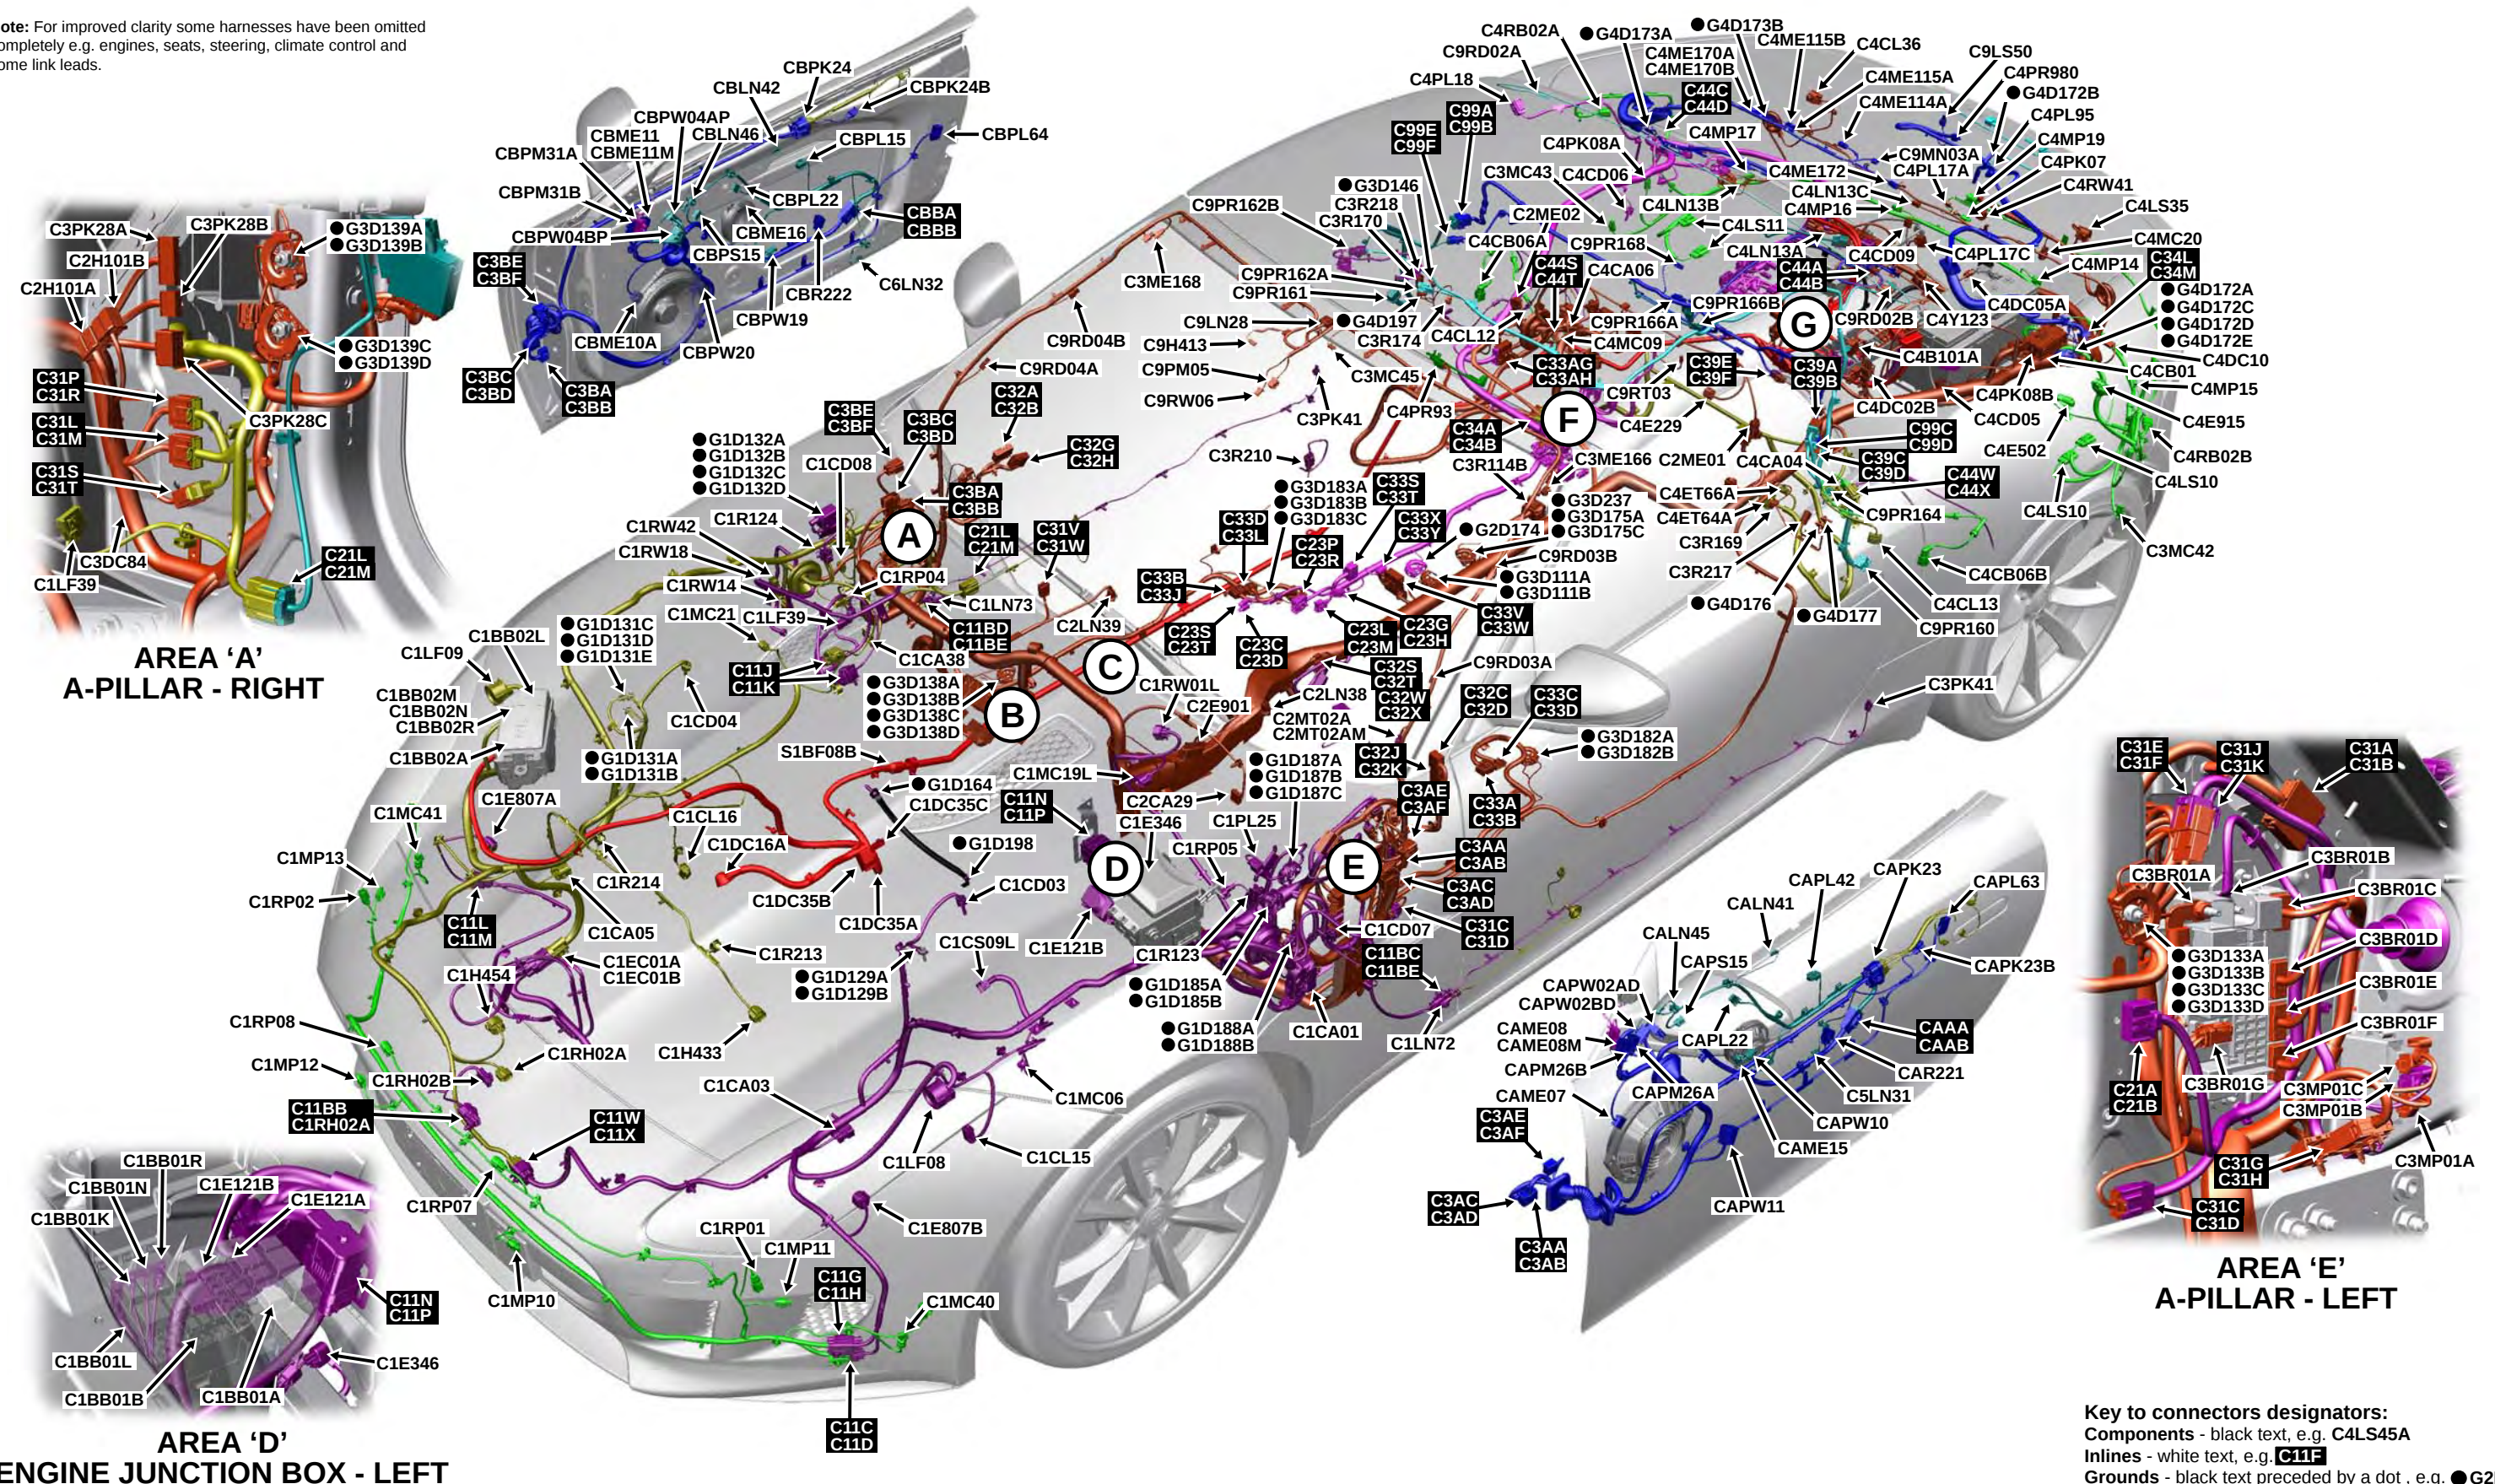

F-TYPE (LHD) - VIN: K00078 >


Version: 1, 10th January 2013

CONNECTOR QUICK REFERENCE GUIDE

Publication Part No. JLR 17 92 21 1E


All paper copies are uncontrolled.

AREA 'B' - INSTRUMENT PANEL AND CENTER CONSOLE



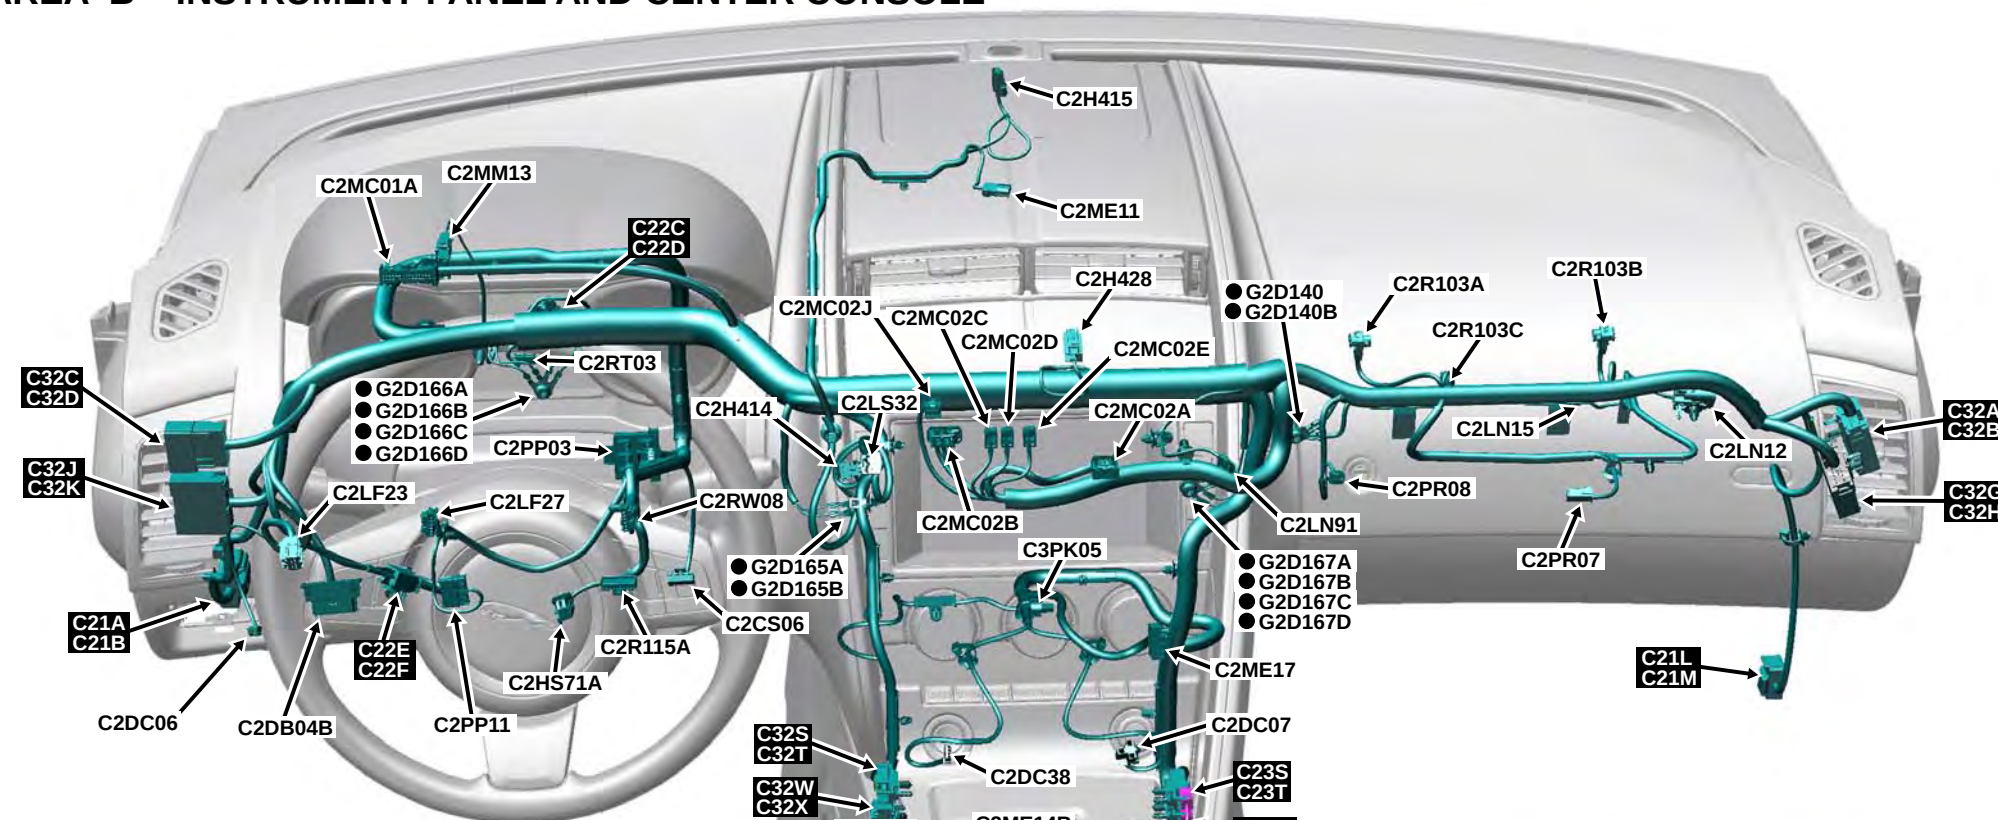


AREA 'C'

PASSENGER FOOTWELL

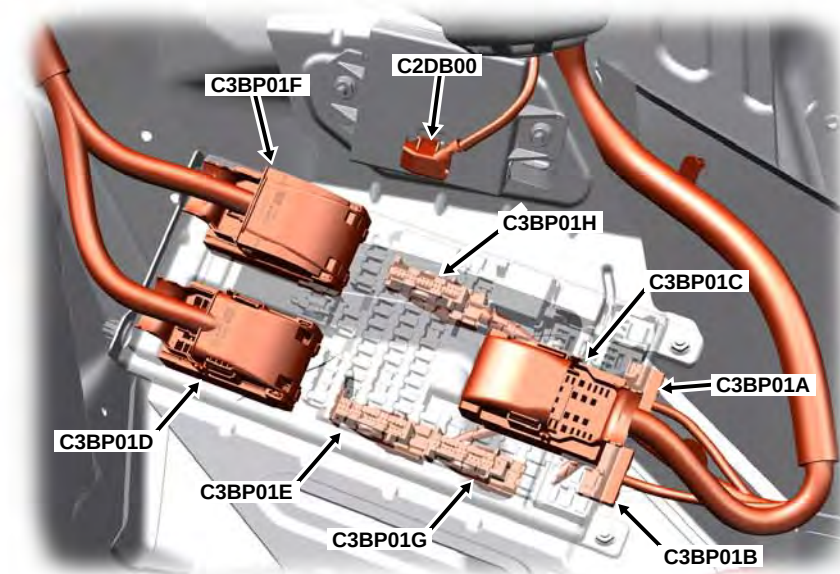

AREA 'F' PASSENGER COMPARTMENT

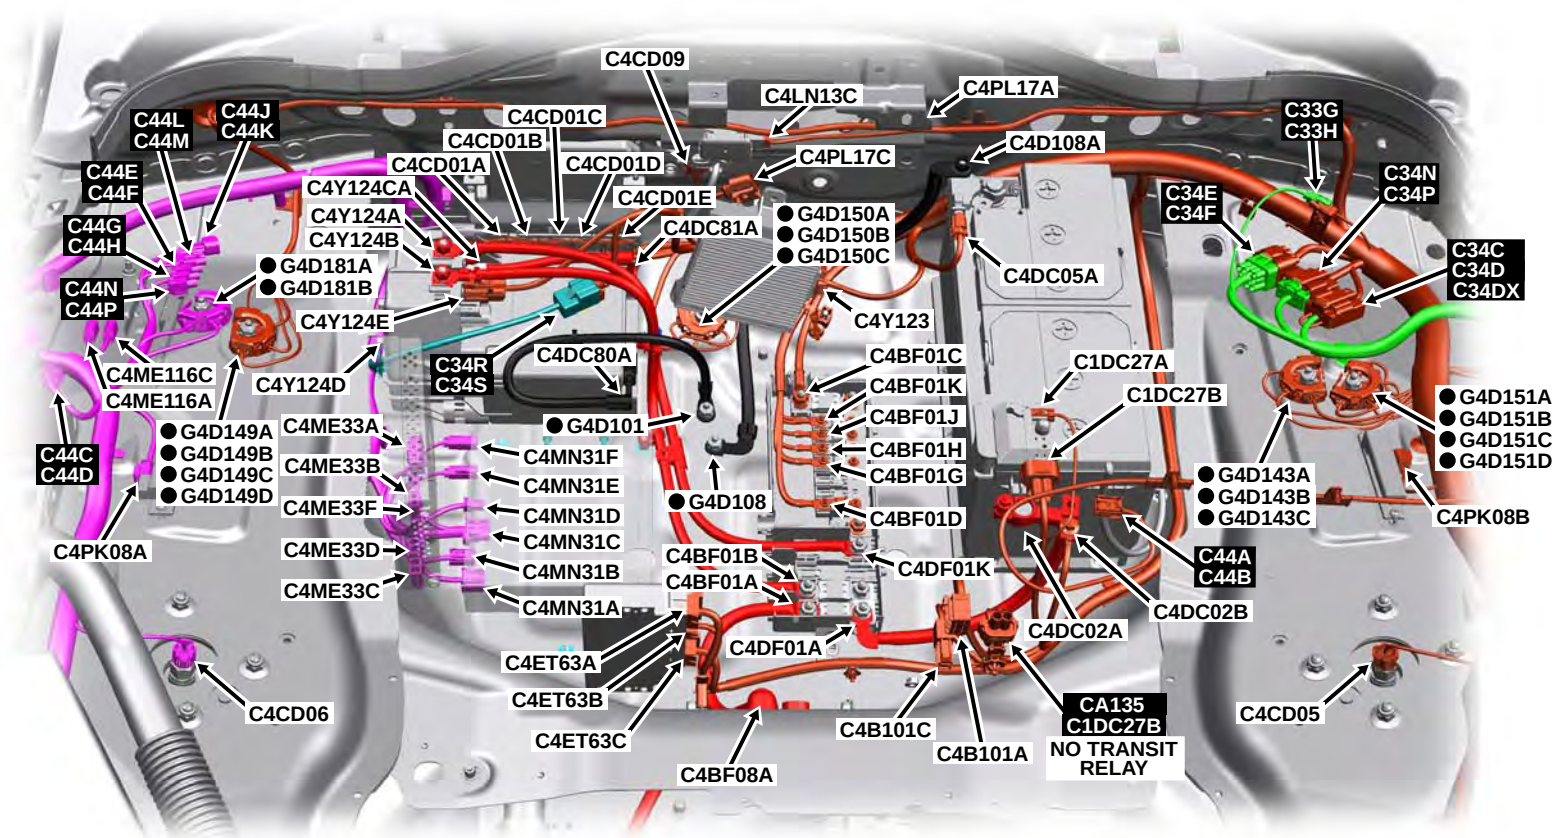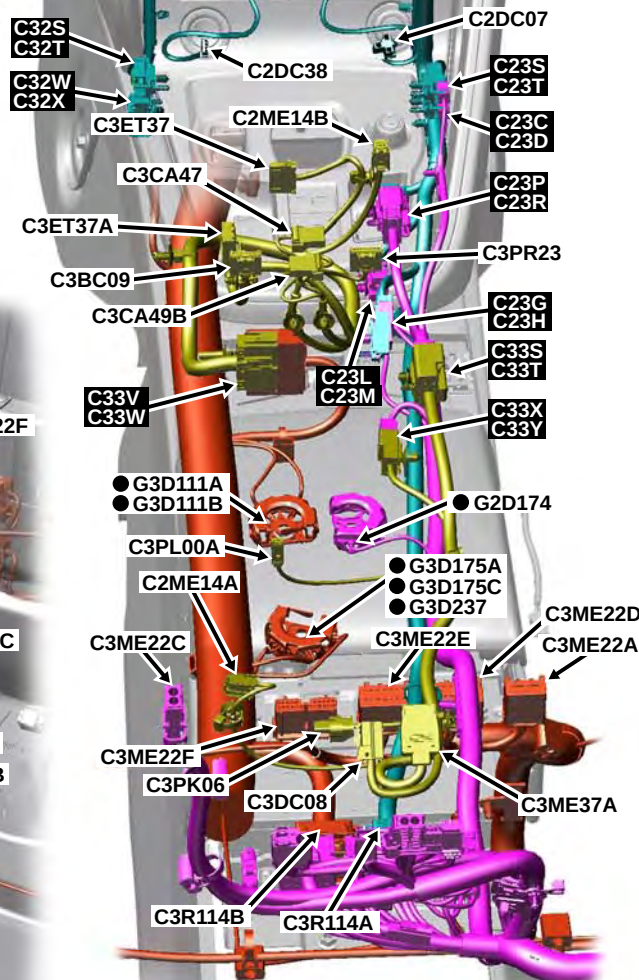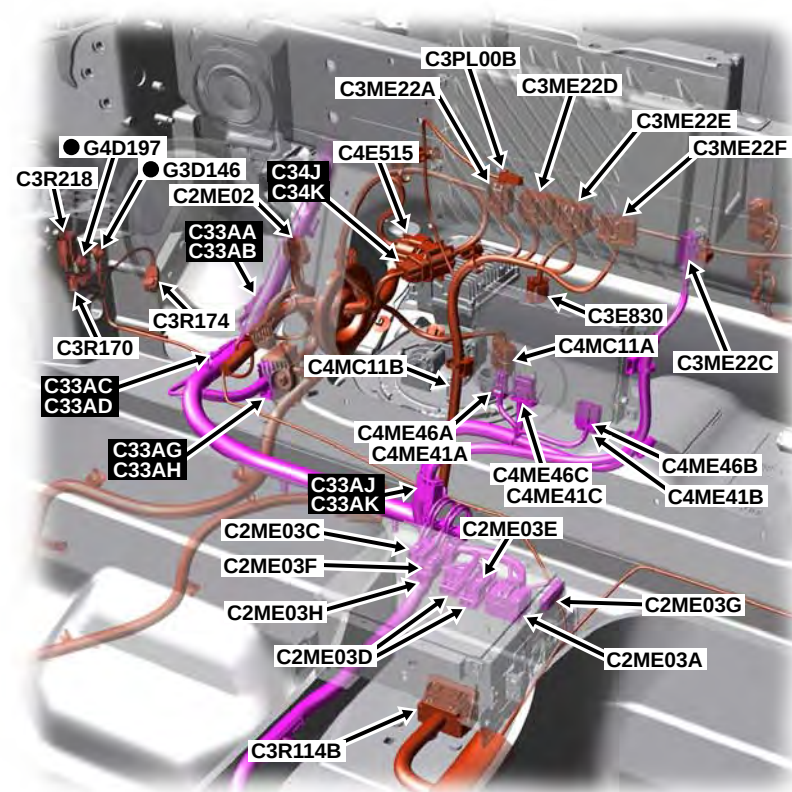

AREA 'G'

LUGGAGE COMPARTMENT